

## LUXURY VINYL FLOORING



IN-101



IN-102



IN-103



IN-104




IN-105



IN-106




IN-107

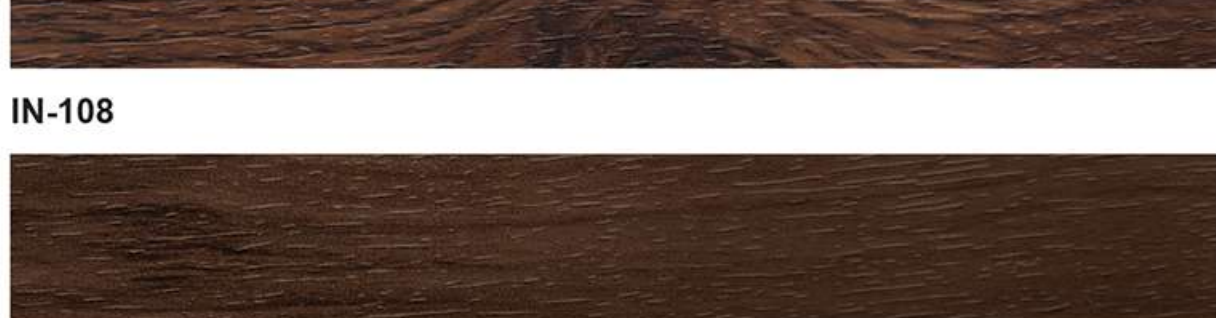

IN-108



IN-109

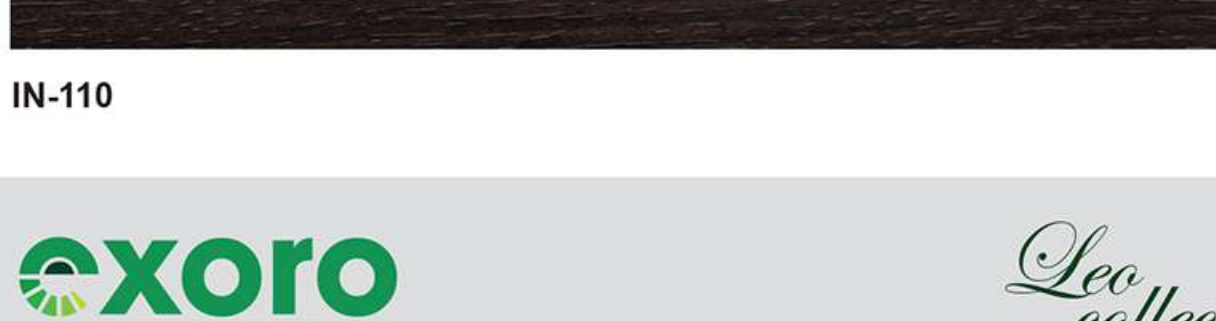

IN-110



LP-201



LP-202



LP-203



LP-204



LP-301



LP-302



LP-303



LP-304

**TECHNICAL INFORMATION**
**Installation Guide**

- The subfloor surfaces must leave space and free movement. All surface imperfections should be filled and sanded with a portland cement-based latex patching compound.
- Room temperature must be maintained at 18 C or higher before/during installation.
- The flooring must be allowed to acclimate in the room to be in installed for a minimum of 24 hours and be stacked flat on the floor to avoid bending the floor.
- Prior to installation, please ensure that both color and lot are the same.

**Maintenance**

- Regularly sweep floor to remove sand and grit that can scratch floor.
- For best results, use only water with a mop. Avoid flooding the floor with too much water.
- For heavily soiled areas use a neutral ph balanced floor cleaner.
- Use caution when lifting boxes.
- Promptly remove any standing water to avoid slippage.
- Keep Wood Collection on the flat surface to keep it from warping.

**Size & Packing**

| SERIES   | THICKNESS | WEAR LAYER | UV  | PCS/BOX | BOX QUANTITY | SUITABLE FOR |
|----------|-----------|------------|-----|---------|--------------|--------------|
| Inovo    | 1.5 mm    | 10 microns | Yes | 30      | 4.18 sq.mtr  | Residential  |
| Leo      | 2.0 mm    | 15 microns | Yes | 30      | 4.18 sq.mtr  | Residential  |
| Leo Plus | 2.0 mm    | 20 microns | Yes | 15      | 4.18 sq.mtr  | Residential  |